Sanyo 8200
Phone Guide

Important Safety Information
Read these guidelines. Breaking the rules may be dangerous or illegal. Violation of the instructions may cause serious injury or death.

- Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- Never place your phone in a microwave oven as it will cause the battery to explode.
- Do not dispose of your battery by fire or with hazardous or flammable materials.
- Make sure that no sharp objects come into contact with the battery.
- Store battery out of reach of children.
- Be careful that children do not swallow any parts of the phone.
- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- In your vehicle do not place installed or portable phone equipment or other objects over the air bag or in the air bag deployment area. If equipment is not installed properly, you or your passengers may be seriously injured.
- Do not use phone while driving.
- Do not use the phone in areas where its use is prohibited.
- Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity.
- Never store your phone in temperatures less than -4°F or greater than +122°F.
- Do not use harsh chemicals or detergents to clean your phone.
- Do not drop, strike, or shake your phone. Such actions may harm the phone and the functionality of the phone.
- Do not use your phone in high explosive areas as the phone may generate sparks.
- Do not get phone wet as this may cause electric shock or seriously damage your phone.
- Do not disassemble your phone.
- An emergency call can be made only within service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

Warning wireless phones have been shown to interfere with pacemakers, hearing aids and other medical devices.

Specific Absorption Rate Data
Your wireless phone meets the government's requirements for exposure to radio waves. Additional information can be obtained from the Federal Communications Commission (FCC).

Getting Started

Front View of Your Phone

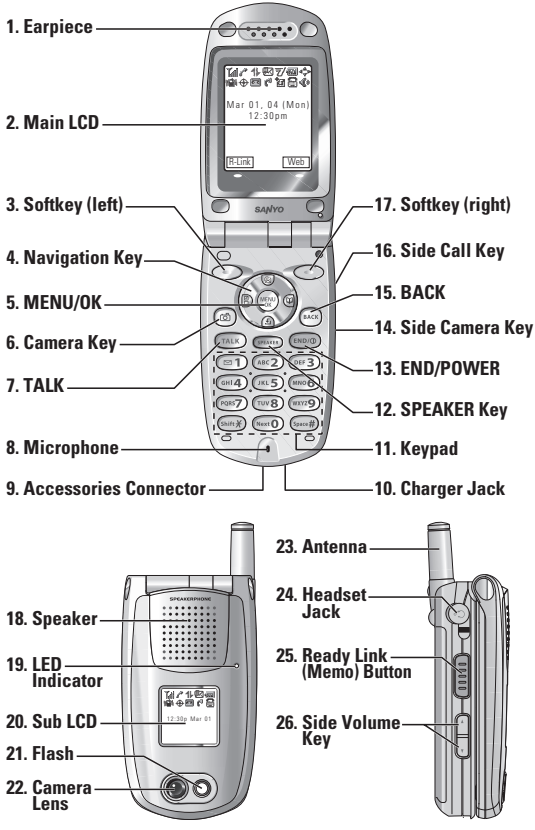

Key Features

1. **Earpiece:** Lets you hear the caller's voice.
2. **Main LCD (display):** Displays the phone's main menu, features, modes, etc.
3. **Softkey (left):** Lets you select the menu corresponding to the bottom left line on the Main LCD.
4. **Navigation Key:** Lets you navigate quickly and easily through the menu options. You can access menu shortcuts by pressing Right: Contacts, Left : My Shortcut, Up: Messaging, and Down: Downloads.
5. **MENU/OK:** Lets you access the phone's menus and select menu options.
6. **Camera Key:** Lets you access the Pictures menu and take pictures.
7. **TALK**: Lets you place or receive calls, answer Call Waiting, or use Three-Way Calling and Voice Dial.
8. **Microphone:** To speak into or record your voice.
9. **Accessories Connector:** Connects optional accessories such as a USB cable.
10. **Charger Jack:** Connects the Travel Charger (included).
11. **Keypad:** Lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
12. **SPEAKER Key:** Lets you place or receive calls in speakerphone mode. You can also use it to activate Voice Dial and Memo recording.
13. **END/POWER:** Lets you turn the phone on/off, end a call, or return to standby mode.
14. **Side Camera Key:** Lets you display the Pictures menu and take pictures.
15. **BACK:** Lets you clear characters from the screen or display the previous page.
16. **Side Call Key:** Lets you place or receive calls without opening the phone.
17. **Softkey (right):** Lets you select the menu corresponding to the bottom right line on the Main LCD.

18. **Speaker:** Lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing or Side Camera key.
19. **LED Indicator:** Shows your phone's connection status at a glance.
20. **Sub LCD:** Lets you monitor the phone's status and see who's calling without opening the phone.
21. **Flash**: The built-in flash lets you take pictures in low light. You can also use it as a mini flashlight.
22. **Camera Lens:** The built-in camera lens lets you take pictures.
23. **Antenna:** Fully extend the antenna for the best reception.
24. **Headset Jack:** Lets you insert the plug of a headset (sold separately) for hands-free phone use.
25. **Ready Link (Memo) Button:** Allows you to access the Ready Link List or Voice Memo menu.
26. **Side Volume Key:** Lets you adjust the receiver volume during a call or ringer volume in standby mode.

Using Your Phone's Battery

Removing the Battery
To remove your battery:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Push the battery release latch up and hold the battery.
3. Pull the battery up and out at a 45-degree angle.

Note: Charge battery completely before using.

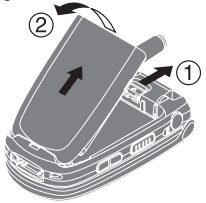

Installing the Battery

To install the LiIon battery:

1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.

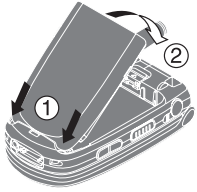

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- Press END/⏻

Turning Your Phone Off

To turn your phone off:

- Press and hold END/⏻ until you see the powering down animation on the display screen.

Making and Answering Calls

Making Calls

To place a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press BACK to erase one digit at a time. Press and hold BACK to erase the entire number.)

3. Press TALK or SPEAKER
4. When you're finished, press END/⏻ to end the call.

Answering Calls

To answer an incoming call with the flip open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press TALK or SPEAKER to answer an incoming call.

To answer an incoming call with the flip closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the Side Call key (●ıl)) on the right side of the phone. (The call will be answered in speakerphone mode.)
   - or -
   Open the phone to use the earpiece.

Ending a Call

To disconnect a call when you are finished:

With the Flip open:

- Close the phone or press END/⏻

With the Flip closed:

- Press and hold ●ıl)

Setting Up Your Voicemail

Dial your newly assigned phone number from your mobile phone and follow the voice prompts to setup voicemail.

Checking voicemail

Your phone's 1 key has been programmed to dial your phone number. This will allow you one touch access to your voicemail. Alternatively, you can always dial your phone number from your mobile phone to access voicemail. To access you mobile phone's voicemail from a different phone, simply dial your phone number, wait for your voice greeting, then press the * key. You will then be prompted to enter your personal voicemail password.

Sending a Message

To send a text message:

1. Press MENU OK to access the main menu.
2. Select **Messaging** and press MENU OK
3. Select **Send Message** and press MENU OK
4. Select **Text Message** and press MENU OK
5. Select **From Phone Book, Mobile Phone#**, or **Email Address** and press MENU OK to enter recipients.
    - From Phone Book to select a recipient from your Contacts list. Highlight an entry and press MENU OK to select. Or select **<Add Entry>** to enter a new entry. Press **Done** (left softkey) when you are finished selecting/entering recipients.
    - **Mobile Phone#** to enter a mobile phone number directly.
    - **Email Address** to enter an email address directly.
6. To add a recipient, press **Options** (right softkey), select **Add Recipients**, and press MENU OK
    - **Edit** to edit the selected entry.
    - **Erase** to erase the selected entry.
    - **Erase All** to erase all entries you have selected/entered.
    - **Add Recipient** to add recipients.
7. Press **Next** (left softkey) when you are finished selecting/entering recipients.
8. To enter a message, select the box under **Message** and press MENU OK
9. Use your keypad to enter a text message (or press **Mode** [right softkey] to select from **Preset Messages** or **Recent Messages**), and press **OK** (left softkey).

10. To set the message priority, select the box under **Priority** and press MENU OK
11. Select **Ordinary** or **Urgent** and press MENU OK
12. Press **Send** (left softkey) to send the message.

Using the Speakerphone

To turn the speakerphone on during a call:

- Press SPEAKER

- or -

- Press **Options** (right softkey), highlight **Speaker On**, and press MENU OK

To turn the speakerphone off during a call:

- Press SPEAKER

- or -

- Press **Options** (right softkey), highlight **Speaker Off**, and press MENU OK

Getting Started With Ready Link

Ready Link allows you to enjoy quick, two-way, "walkie-talkie-style" communication with your friends, family, and co-workers. You can make 1-to-1 or 1-to-many calls (up to 5 others on the same call) to any other Ready Link user, anywhere on the Nationwide Network. You can make and receive Ready Link calls when your phone displays

Setting Ready Link Mode

To enable or disable Ready Link mode:

1. Press MENU OK to access the main menu.
2. Select **Settings** and press MENU OK
3. Select **Ready Link** and press MENU OK
4. Select **Enable/Disable** and press MENU OK
5. Select **Enable** and press MENU OK. (The default setting is **Disable**.)

- **Enable**: Lets you make or receive Ready Link calls any time your phone is not in use.
- **Disable**: Disables your phone's Ready Link service; you will not be able to make or receive Ready Link calls or access your Ready Link contacts.

Preparing Your Phone for Ready Link Service

The first time you use your Ready Link Phone, your phone must identify itself and make itself available to the Ready Link network.

1. When you activate Ready Link for the first time, you will be prompted to activate Ready Link service. Press **OK** (left softkey) to activate. (You will see "**Preparing Ready Link service... Please wait**.")
2. Press R-Link (left softkey) or the Ready Link (Memo) button on the side of your phone ( ). Press Yes (left softkey) to read a brief introduction to Ready Link, and press Next (left softkey) to continue through the tutorial. Your phone is now ready to make and receive Ready Link calls.

Making and Receiving a Ready Link Call

Making a Ready Link Call (1-to-1 Call)

You can place a 1-to-1 Ready Link call by entering a Ready Link number or by selecting a contact from the Ready Link List.

To place a Ready Link call by selecting a contact:

1. Press **R-Link** (left softkey) or press ( ) to access the Ready Link List.
2. Press **Go to** (left softkey), highlight the list from which you want to place a call (**Company List, Personal List, Outgoing, Incoming, or Missed**), and press MENU OK
3. Highlight the contact you want to call, and press and hold to place the call and get the floor. (You will see **R-Link calling...**

and **Connecting...** followed by "**You have floor**." You can now begin speaking.)

- or -

Highlight the contact you want to call and press and release to place the call. (The call will connect as described above, but "**Floor is open**." will appear on the screen and either you or your contact may press and hold to take the floor and speak.)

4. Continue holding as you speak. When you are finished speaking, release the Ready Link (Memo) button to allow other contacts to speak. (When the other party takes the floor, you will see the speaker's name and phone number and the text "**has floor**.")
5. When you are finished, press END/⏻

Making a Ready Link Call by Entering a Number

To place a Ready Link call by entering a number:

1. From standby mode, enter the Ready Link number you want to dial.
2. Press to place the Ready Link call. Continue holding to take the floor and speak.
   - The contact's name appears on the display if there is a matched number in your Ready Link List.
3. Continue with the Ready Link call, pressing and holding to speak and releasing it to allow others to reply.
4. When the call is finished, press END/⏻

- or -

1. Press **R-Link** (left softkey) or press to access the Ready Link List.
2. Press **Go to** (left softkey), highlight **Enter R-Link#** and press MENU/OK
3. Enter the Ready Link number you want to dial.
4. Follow steps 2-4 above.

Receiving a Ready Link Call (1-to-1 Call)

1. Make sure your phone's Ready Link mode is enabled
2. When you receive a Ready Link call from a contact, "R-Link Call," the contact's name, and the Ready Link number appear on the display. (You do not need to take any action to answer the call.)
3. If the person placing the call has kept the floor (held the Ready Link Memo] button), you will see the contact name and Ready Link number along with "**has floor**.", and you will hear the caller speaking.
4. When the caller finishes speaking and releases the Ready Link (Memo) button, you will see "**Floor is open**." on the display screen. Press and hold to take the floor and reply to the caller. (You will see "**You have floor**." and hear a tone confirming that you may speak.)
5. When the conversation is finished, press END/⏻

Taking Pictures

To take a picture with the phone open:

1. Press MENU OK to access the main menu.
2. Select **Pictures** and press MENU OK to access the Pictures menu.
3. Select **Camera** and press MENU OK to activate camera mode.
4. Using the phone's main LCD as a viewfinder, aim the camera lens at your subject.
5. To take the picture, press 📷 MENU OK **Capture** (left softkey), or the Side Camera key. (The picture will be saved automatically in your In Camera folder.)
6. Press **Next** (right softkey) to go to the next step.

Sending Picturemail

To send Picturemail from the In Camera folder:

1. With the clamshell open, press 📷 to access the Pictures menu.
2. Select **My Pictures** and press MENU OK

3. Select **In Camera** and press MENU OK.
4. Press MENU OK to select a picture. (The check box on the lower right corner will be marked. You can select multiple pictures.) If there is no selected picture, the currently highlighted picture will be selected.
5. Press **Send** (left softkey).
6. Select an option from the following and press MENU OK.
   - **From Phone Book** to select a recipient from your Contacts list. Highlight a recipient and press MENU OK to select.
   - **Mobile Phone#** to enter a mobile phone number directly.
   - **Email Address** to enter an email address directly.
7. Press **Next** (left softkey) when you are finished selecting/entering recipients. (You may include up to ten recipients per Picturemail.)
8. If you wish to record and include a **Voice Memo** with the picture you are sending, highlight the box under Voice Memo and press **Record** (right softkey). Press MENU OK to start recording. (Maximum recording time is 10 seconds.)
9. If you wish to enter a text message, highlight the box under **Message** and press **Change** (right softkey). Enter your message using your keypad (or press Mode [right softkey] to select from **Preset Messages** or **Recent Messages**) and press MENU OK.
10. Confirm the recipients, message, voice memo, and picture.
    - To change a recipient, highlight the recipient, press Change (right softkey), and follow the instructions in step 6 on the previous page to select or edit the recipient.
    - To change Voice Memo, highlight the box beneath **Voice Memo** and press **Options** (right softkey) to display options:
      VoiceMemo Play to play the attached voice memo.
      VoiceMemo Rec to re-record the voice memo.
      VoiceMemo Erase to delete the voice memo from the Picturemail.
    - To change the attached message, highlight the box beneath **Message** and press **Change** (right softkey).
    - To change the attached pictures, select a thumbnail picture using your navigation key and press **Change** (right softkey). Select an alternate picture and press MENU OK, then press **Next** (left softkey).
11. Press **Send** (left softkey) to send the Picture Mail.

The Wireless Web

Launching the browser

You must be a subscriber to these services in order to use them.

To Launch a web connection:

1. Press the Main Menu or OK button.
2. Press the number 4 button for the Web.
3. Your connected to the Mobile Web Home page.

-or-

1. Press the right softkey
2. Your connected to the Mobile Web Home page.

To use softkeys:

- Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing MENU OK

Tip: Depending on which Websites you visit, the labels on the softkeys may change to indicate their function.

Scrolling

To scroll line by line through Websites:

- Press the navigation key up or down.

To scroll page by page through Websites:

- Press the volume buttons on the side of the phone.